



FIXNORDIC.DK

WHEN THE SUN DOESN'T SHINE



INSTALLATION GUIDELINE (Warm roof - concrete deck)

FIXNORDIC
proof enough.



Symbol description



Drill Driver with a Ø20 mm concrete drillBit



Hammer drill with a Ø8 mm concrete drill




Impact Wrench with a 19 mm impact socket



Gas torch



Grinder with a cutting disc.

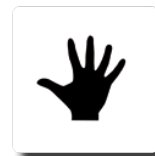


Manual handling



Deburring tool




Pay attention!

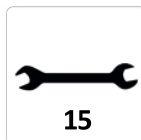

15 mm wrench



Loosening operation
(anti clock wise rotation)

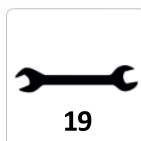


19 mm wrench



Tightening operation
(clock wise rotation)






Roof Console

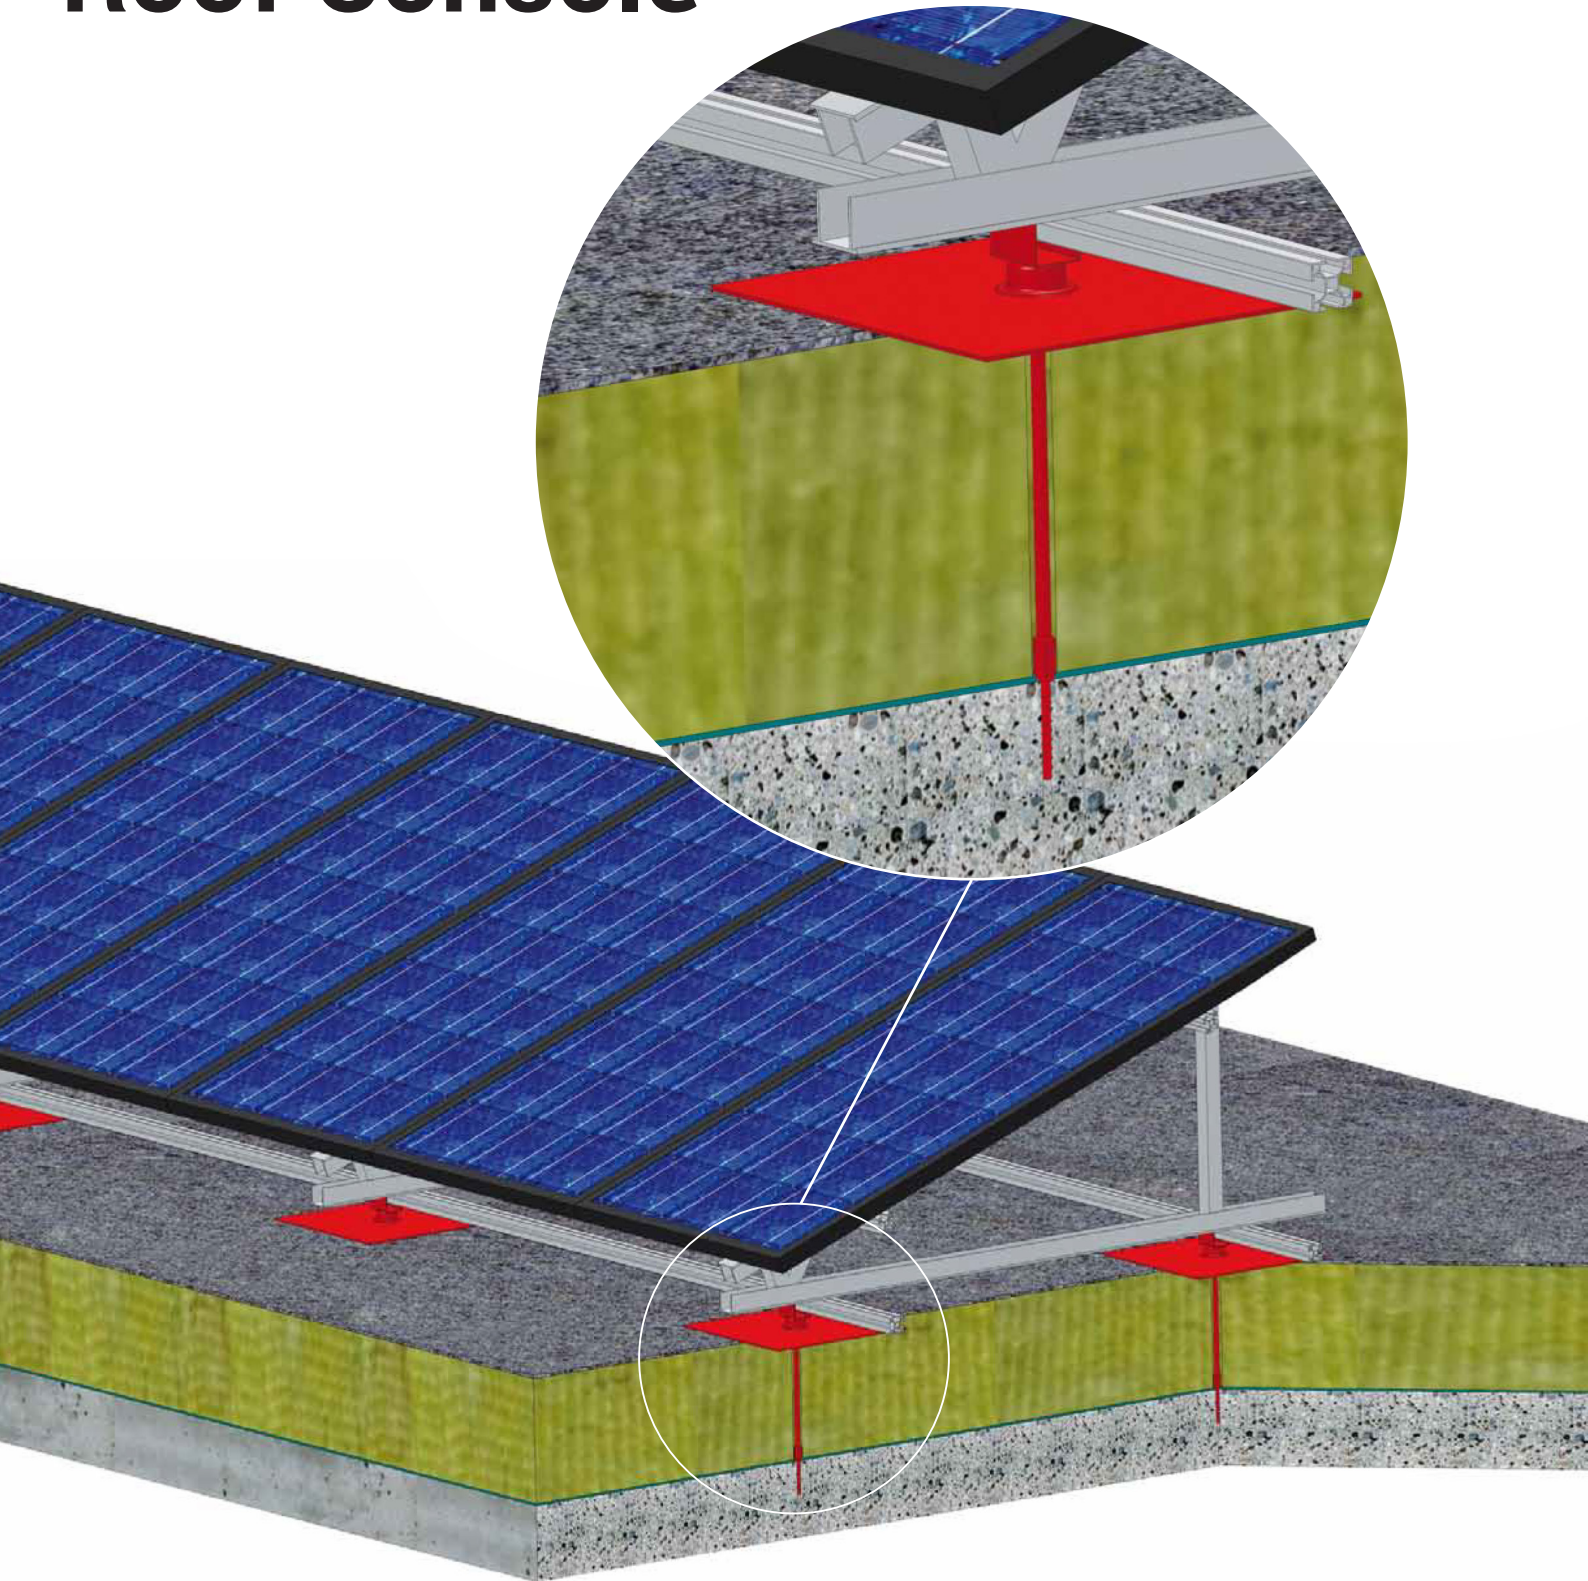


1. Insulation drilling !


Pay attention to the Vapor Control Layer

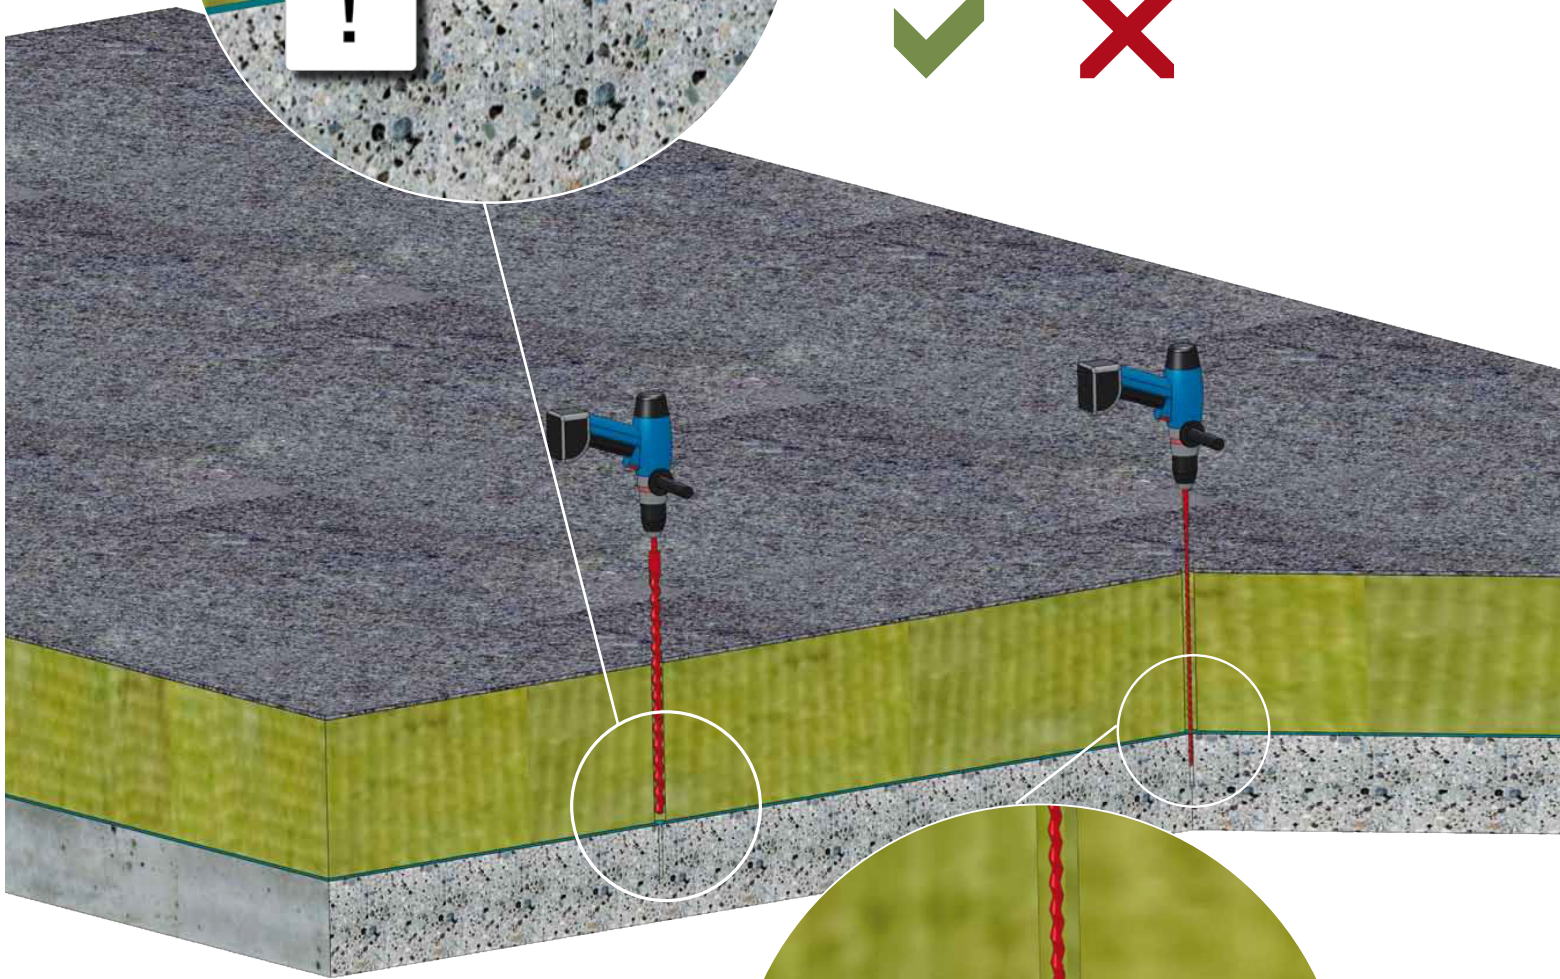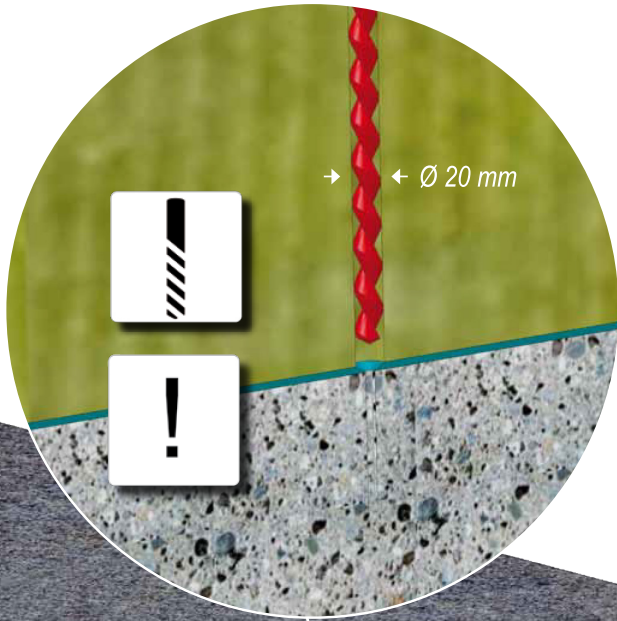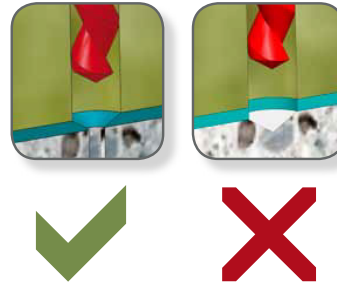


2. Concrete drilling

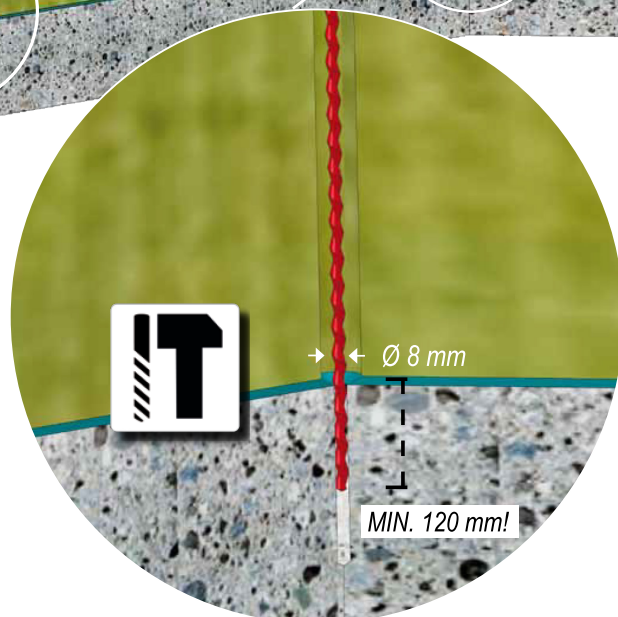


3. Concrete anchor mounting

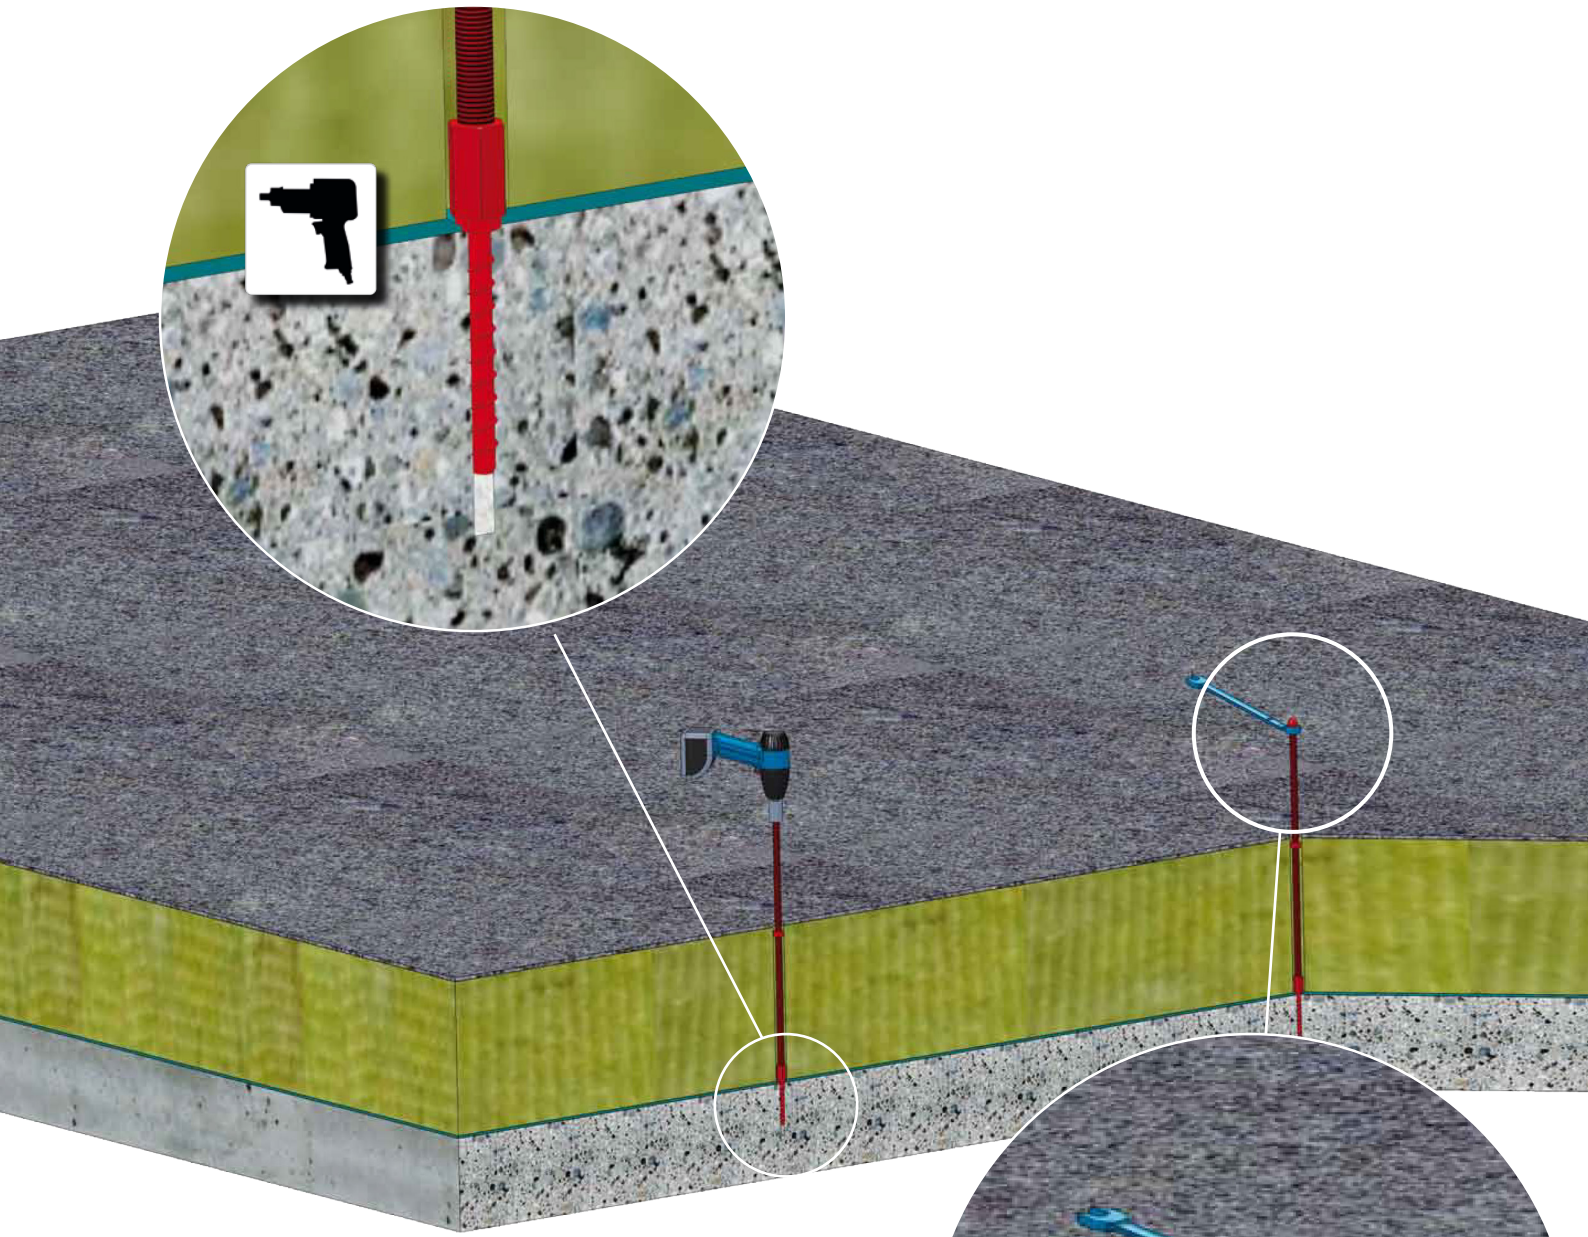


4. Anchor tightening

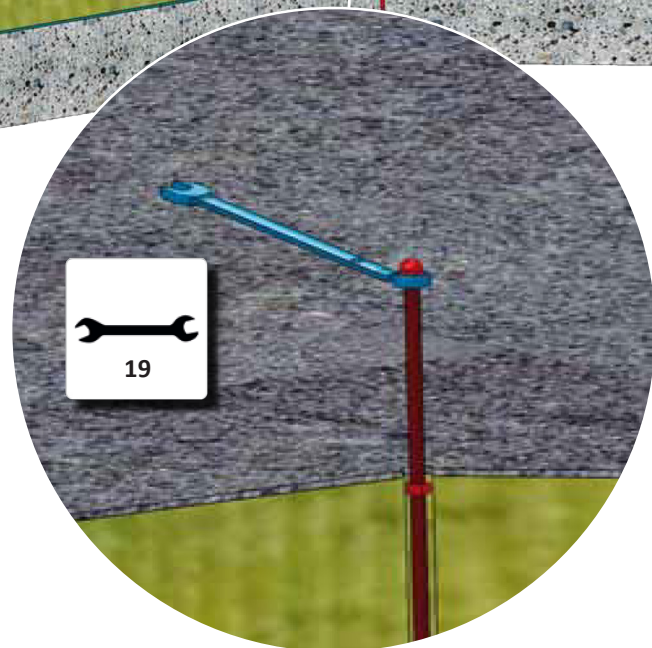

5. Anchor cutting

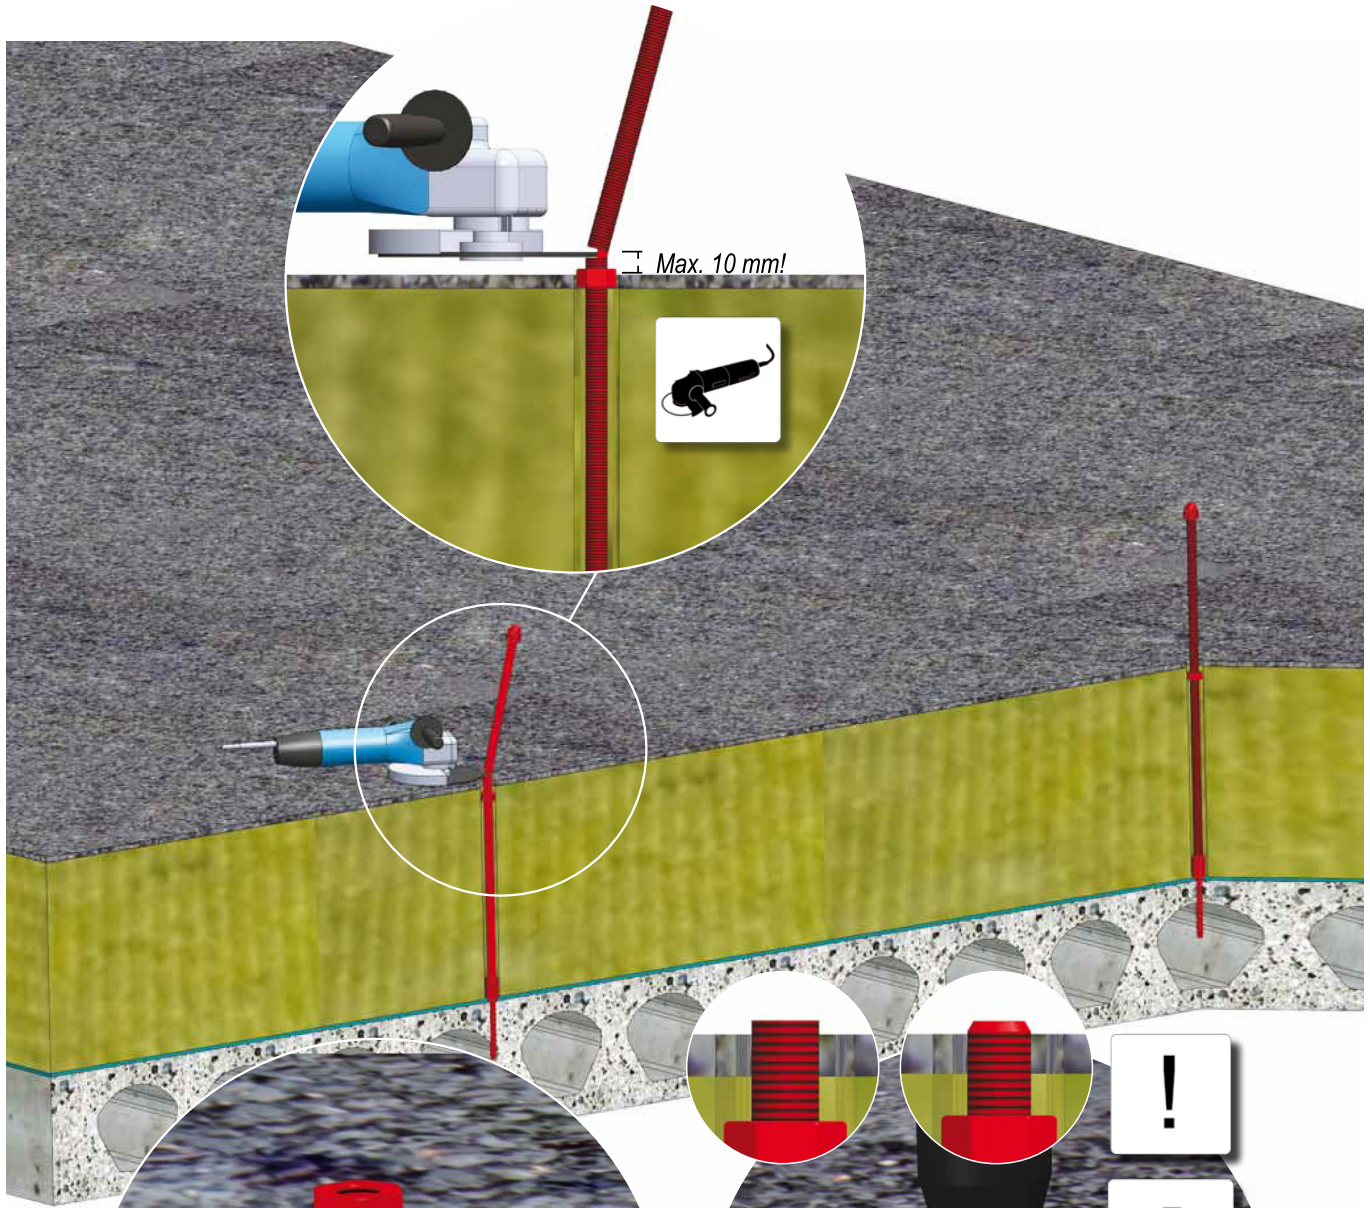


6. Nut removal

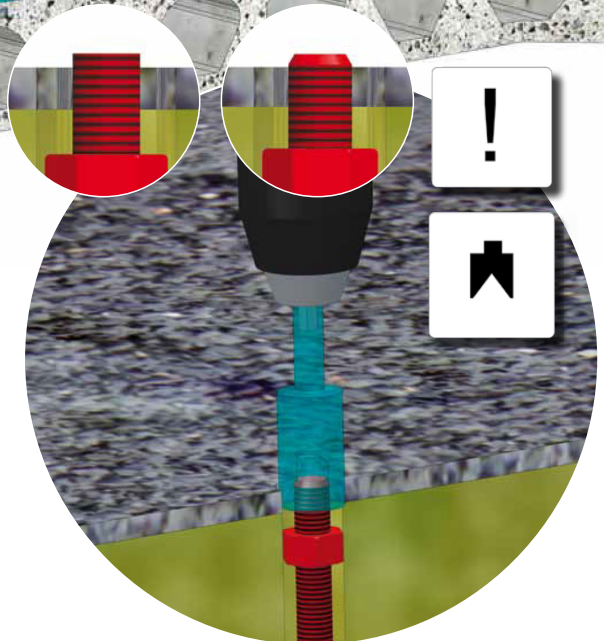





7. Thread deburring



8. Console Adapter and Console Nut installation

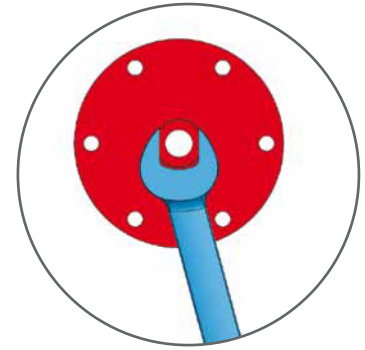


8. Constraining of the Console Adapter

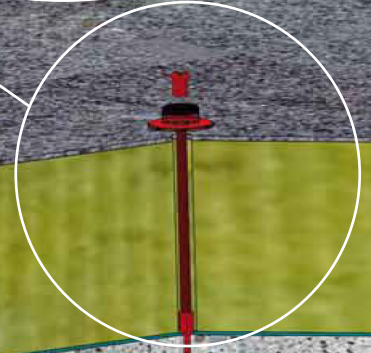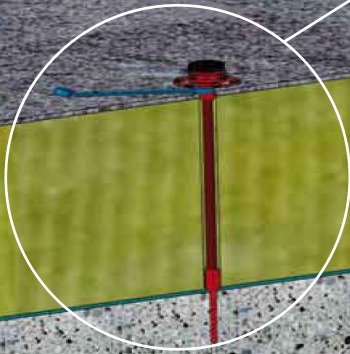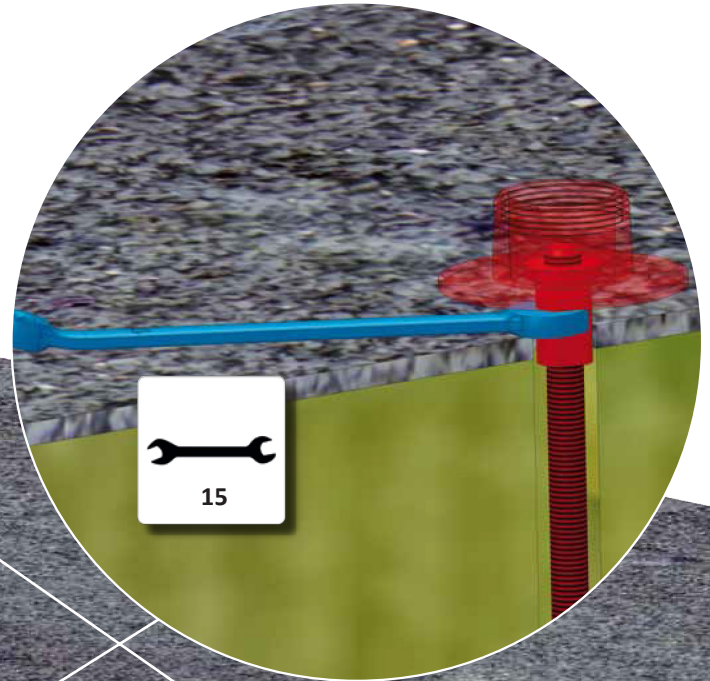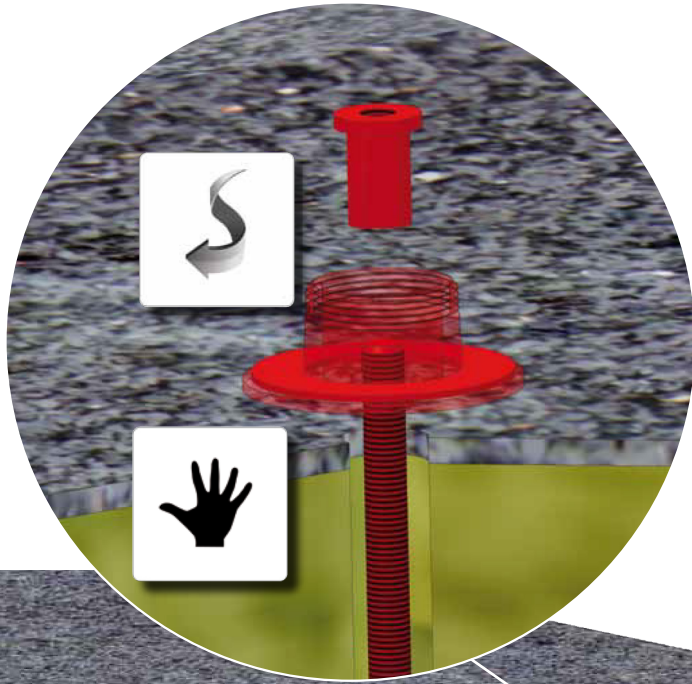

10. Fixation of the Console to the Console Adapter







PAY ATTENTION
Constrain the Console Adapter by the engaged wrench while tightning

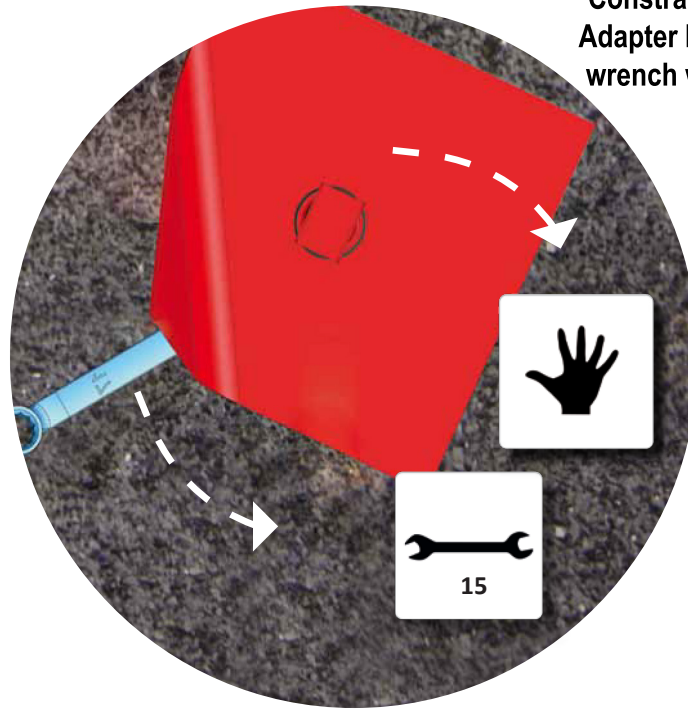


11. Roof Surface Alignment



PAY ATTENTION
Over tightening may cause a
negative surface alignment!

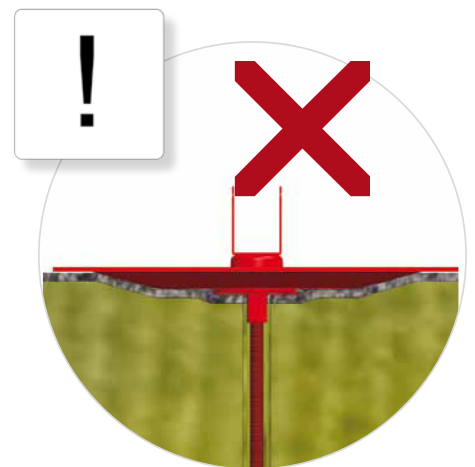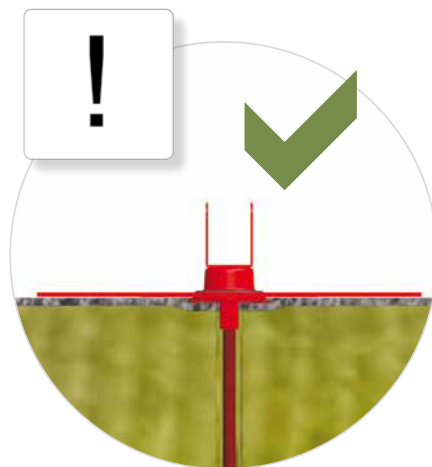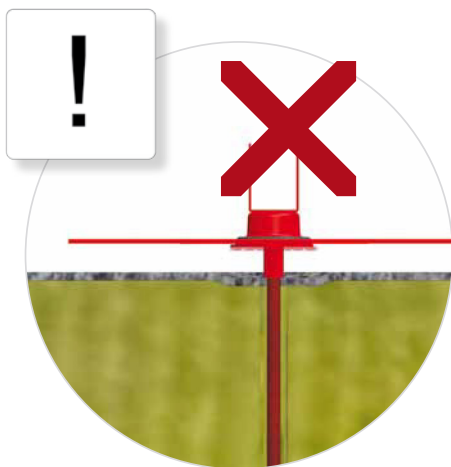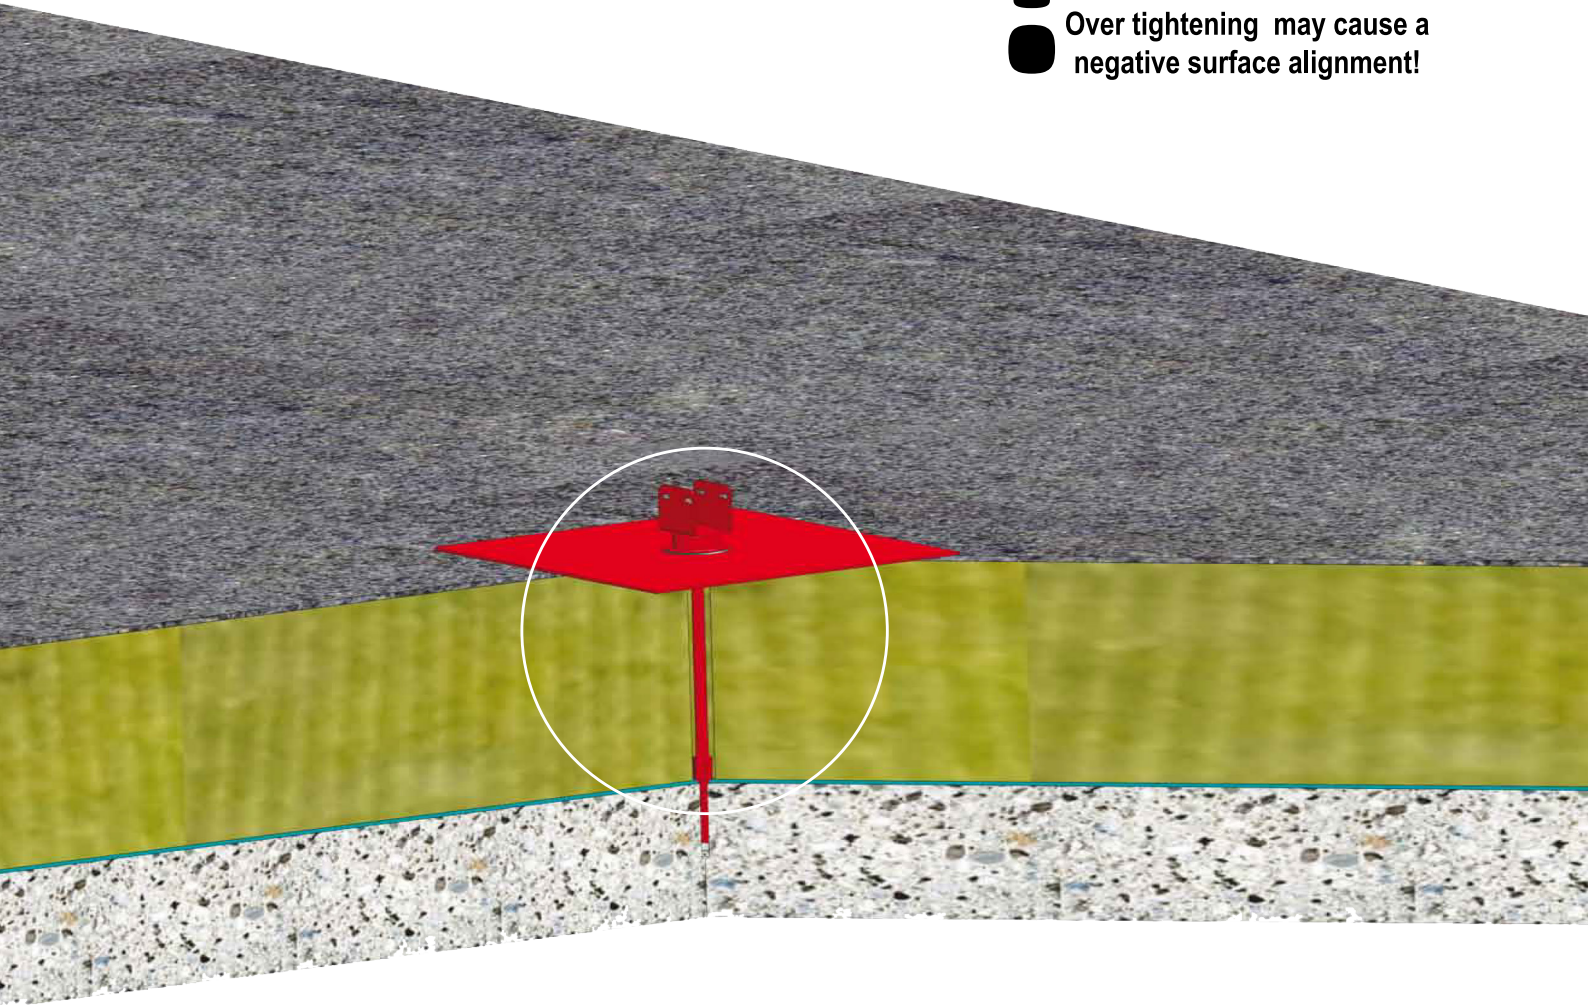

12. Console Alignment

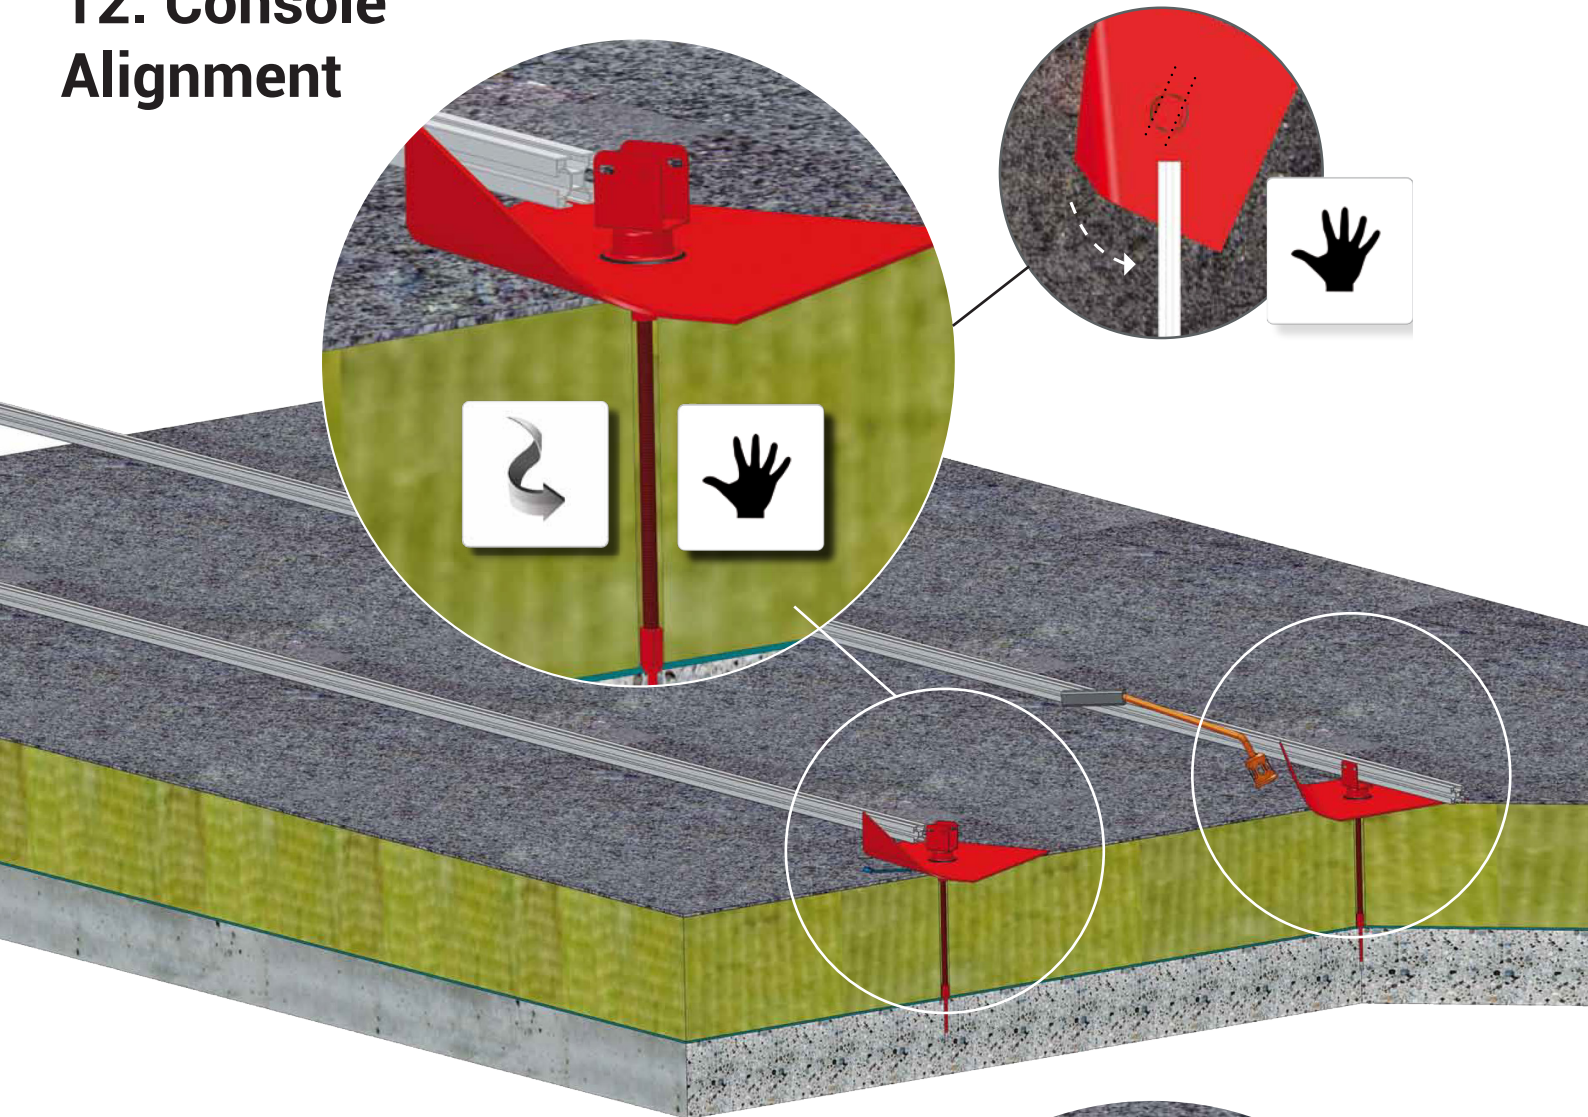

13. Torching

